


JELENA ROZGA BAND

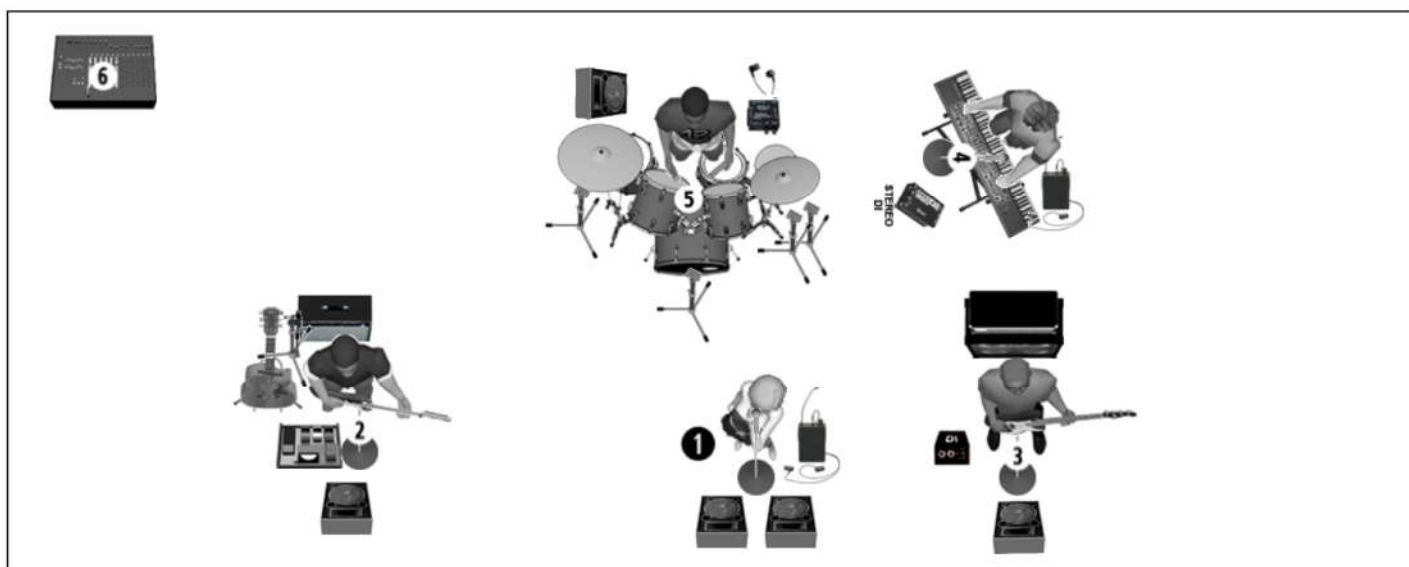

1. LEAD VOCAL		2. GITARA		3. BASS	
1. Stalak za mikrofoni	1 KOMAD	1. Stalak za mikrofoni	2 KOMADA	1. Stalak za mikrofoni	1 KOMAD
2. Monitori	2 KOMADA	2. Kablovi XLR	2 KOMADA	2. Kablovi XLR	3 KOMADA
3. Kablovi XLR (za MIKROFON I IN EAR MONITOR)	2 KOMADA	3. SHURE BETA SM58	1 KOMAD	3. SHURE BETA SM58	1 KOMAD
4. SHURE BETA SM 58	1 KOMAD	4. SHURE SM57	1 KOMAD	4. DI-BOX MONO	1 KOMAD
		5. Strujna utičnica sa 3 šteka	1 KOMAD	5. Strujna utičnica sa 3 šteka	1 KOMAD
		6. Monitori	1 KOMAD	6. Monitori	1 KOMAD
4. KLAVIJATURA		5. BUBANJ		6. TONAC	
1. STEREO DI-BOX	1 KOMAD	1. Stalak za mikrofoni	4 KOMADA	1. Mixer 16-Kanalni sa 7 grupa Monitoringa (5 MONITORA I 3 IN EAR) (Midas, Soundcraft ,Yamaha, Behringer)	
2. Stalak za mikrofoni	1 KOMAD	2. Kvačice za mikrofoni	4 KOMADA		
3. Kablovi XLR	2 KOMADA	3. Kablovi XLR	9 KOMADA		
4. Kablovi TS-TRS	2 KOMADA	4. XLR KABEL (za IN EAR MONITOR)	1 KOMAD		
5. SHURE BETA SM58	1 KOMAD	5. Strujna utičnica sa 3 šteka	1 KOMAD		
6. Strujna utičnica sa 5 šteka	1 KOMAD	6. Mikrofonski set za bubanj (Shure,Audix,Senheiser)	8 KOMADA		
7. XLR KABEL (za IN EAR MONITOR)	1 KOMAD	*. (Noga, Snare, Tom 1, Tom 2, Floor Tom, Hi-Hat, Over)			

INPUT LIST			
<i>Channel</i>	<i>Input</i>	<i>Mic/DI/XLR</i>	<i>Stand/Mount</i>
1.	Kick	Shure Beta 52	Small Boom
2.	Snare	Shure SM 57	Boom
3.	Tom 1	Senheiser e904	
4.	Tom 2	Senheiser e904	
5.	Floor Tom	Senheiser e904	
6.	Hi Hat	Shure SM81	Tall Boom
7.	Over L	Oktava Mk102	Tall Boom
8.	Over R	Oktava Mk102	Tall Boom
9.	Bass DI	XLR / DI Mono	NO
10.	Gitara	Shure SM57	Small Boom
11.	Key DI L	Active DI (-20db)	NO
12.	Key DI R	Active DI (-20db)	NO
13.	Lead VOX	Shure Beta 58	Tall Straight
14.	Guitar VOX	Shure Beta 58	Tall Boom
15.	Key VOX	Shure Beta 58	Tall Boom

MONITOR OUTPUT MIX						
<i>INPUT</i>	<i>Channel</i>	<i>LEADVOCAL /MONITOR /IN EAR</i>	<i>GUITAR MONITOR</i>	<i>BASS MONITOR</i>	<i>DRUMM MONITOR IN EAR</i>	<i>KEYS IN EAR</i>
1.	Kick	NO	NO	YES/30%	YES/100%	YES/50%
2.	Snare	NO	NO	YES/30%	YES/60%	YES/30%
3.	Tom 1	NO	NO	NO	YES/30%	YES/30%
4.	Tom 2	NO	NO	NO	YES/30%	YES/30%
5.	Floor Tom	NO	NO	NO	YES/30%	YES/30%
6.	Hi Hat	NO	NO	YES/30%	YES/50%	YES/30%
7.	Over L	NO	NO	NO	YES/30%	YES/30%
8.	Over R	NO	NO	NO	YES/30%	YES/30%
9.	Bass DI	NO	NO	NO	NO	YES/
10.	Gitara	YES/30%	NO	NO	YES/30%	YES/30%
11.	Key DI L	YES/30%	YES/10%	YES/10%	YES/30%	YES/100%
12.	Key DI R	YES/30%	YES/10%	YES/10%	YES/30%	YES/100%
13.	Lead VOX	YES/100%	YES/50%	YES/30%	YES/50%	YES/50%
14.	Guitar VOX	YES/30%	YES/100%	YES/30%	YES/30%	YES/30%
15.	Key VOX	NO	NO	NO	YES/30%	YES/30%